

# QUICK START GUIDE

## PARTS LIST

**A**



Yealink W52  
Cordless Phone

**B**



Jabra Link 180

**C**



Jabra Biz  
1900 Headset

**D**




5ft Cat 5e  
Ethernet Cable

**E**



2.5mm plug to  
Mod plug cable


- 1** Locate your existing home based router\* and verify the availability of open Ethernet ports.

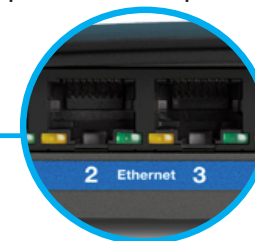

**\*Router shown may not match your installed router as models and style may vary.**

- 2** Connect Internet Port on Yealink W52 Wireless phone base **A** to any open Ethernet port on your home based router using supplied ethernet cable **D**.

**A**

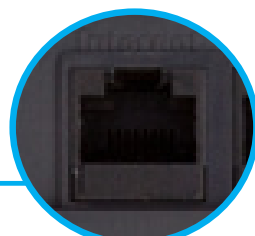


- 3** Connect Jabra Biz 1900 headset **C** to Jabra Link 180 base **B**. Connect Jabra Links 180 base **B** to Yealink W52 cordless phone base **A** using 2.5mm plug to Modular plug cable **E**.



**C**

**B**

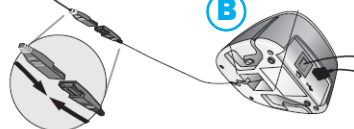

**A**



**B**



**E**



- 4** Complete setup by visiting <http://www.comm-core.com/k12setup> to set a new Voicemail password. You will need to use your assigned phone extension found on the outside of your Yealink T20 phone box, along with the **default password : 123456** to complete Voicemail password setup.